
EZ3500 Series Fluoride Analysers

Applications

- Wastewater
- Process water

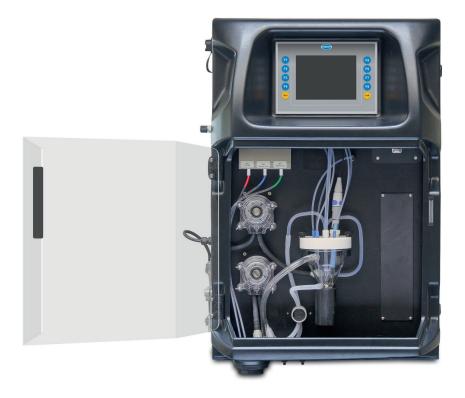

Online ion-selective Fluoride measurements with standard addition for industrial applications

ISE technology for complex water matrices

The EZ3500 Series are used for water monitoring applications where ion-selective electrodes are the preferred analytical technique, but the water matrix is complex. Standard addition helps minimise matrix interferences that otherwise might contribute to the output signal of the electrode.

Discontinuous, automatic standard addition

The EZ3500 Series run discontinuous measurements with careful addition of a known standard in an analysis vessel. Discontinuous ISE analysis enhances control over the potentiometry, eliminates cross-contamination between cycles and reduces overall reagent consumption.

The EZ3500 Series combine unique technology with a set of analysis, control and communication features in an industrial analyser mainframe designed for the highest performance:

- Smart automatic features
- Control and communication via industrial panel PC
- Analogue and digital output options
- Multiple stream analysis (up to 8 streams)

With the EZ3507 (1-10 mg/L) and the EZ3508 (10-100 mg/L) there is a selection of measuring ranges to match your application needs.




Technical Data*

Parameter	Fluoride					
Measurement method	Discontinuous measurement by combined ion-selective electrode with standard addition					
Measuring range	1 - 10 mg/L F ⁻ 10 - 100 mg/L F ⁻					
Precision	Better than 2% full scale range for standard test solutions					
Detection limit	≤ 1 mg/L					
Interferences	Metal ions like aluminium > 72 mg/L, calcium > 108 mg/L and iron > 150 mg/L. Fats, oil, proteins, surfactants and tar.					
Cycle time	8 minutes					
Automatic cleaning	Yes					
Calibration	Automatic, 2-point; frequency freely programmable					
Validation	Automatic; frequency freely programmable					
Ambient temperature	10 - 30 °C \pm 4 °C deviation at 5 - 95% relative humidity (non-condensing)					
Reagent requirements	Keep between 10 - 30 °C					
Sample pressure	By external overflow vessel					
Flow rate	100 - 300 mL/min					
Sample temperature	10 - 30 °C					
Sample quality	Maximum particle size 100 μ m, < 0.1 g/L; Turbidity < 50 NTU					
Power	110 - 240 VAC, 4 A, 50/60 Hz Max. power consumption: 150 VA					
Instrument air	Dry and oil free according to ISA-S7.0.01-1996 quality standard for instrument air					
Demineralised water	For rinsing purposes (application depending)					
Drain	Atmospheric pressure, vented, min. Ø 64 mm					
Earth connection	Dry and clean earth pole with low impedance (< 1 Ohm) using an earth cable of > 2.5 mm ²					
Analogue outputs	Active 4 - 20 mA max. 500 Ohm load, standard 1, max. 8 (option)					
Digital outputs	Optional: RS232, Modbus (TCP/IP, RS485)					
Alarm	1 x malfunctioning, 4 x user-configurable, max. 24 VDC/0.5 A, potential free contacts					
Protection class	Analyser cabinet: IP55 / Panel PC: IP65					
Material	Hinged part: Thermoform ABS, door: plexiglass Wall section: Galvanised steel, powder coated					
Dimensions (H x W x D)	690 mm x 465 mm x 330 mm					
Weight	25 kg					
Certifications	CE compliant / UL certified					

*Subject to change without notice.

Dimensions

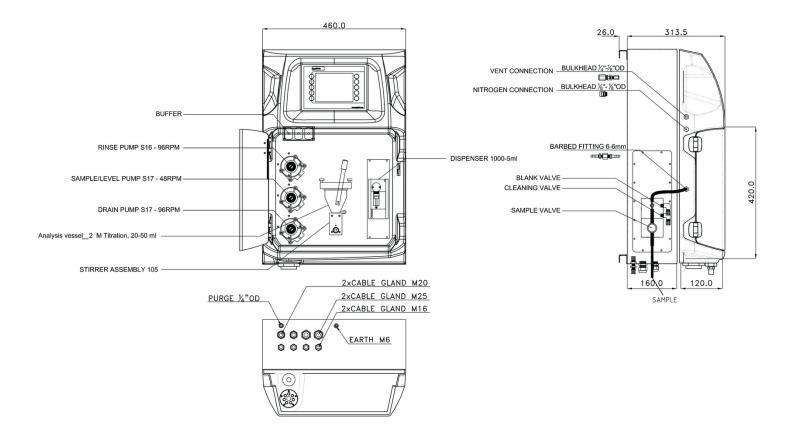

Be confident with Hach Service

Start-Up/Commissioning: Our service technicians visit your site and setup instrumentation, provide basic end-user training on operations and maintenance, and validate settings and performance to get you started.

Service Agreement: Hach provides on-site and in-factory repair, preventive maintenance, and calibration programs for your instruments to ensure reliability and instrument up-time. We have services to fit your specific needs.

Order Information - Part Number Configurator

Standard range, 1-10 mg/L F	EZ3507.99	x	x	x	x	x	2
Standard range, 10-100 mg/L F ⁻	EZ3508.99						
Measurement range settings / Dilutior	ontiono						
25% of standard range (only EZ3508)	В						
50% of standard range		C					
Standard range		0					
Customised		Z					
Gustomiscu		2					
Power supply							
Standard 110 - 240 VAC; 50/60 Hz			0				
Customised			Z				
Number of sample streams							
1 stream				1			
2 streams				2			
3 streams				3			
4 streams				4			
5 streams				5			
6 streams				6			
7 streams				7			
8 streams				8			
Outputs							
1x mA					1		
2x mA					2		
3x mA					3		
4x mA					4		
5x mA					5		
6x mA					6		
7x mA					7		
8x mA RS232					8 A		
Modbus TCP/IP					B		
Modbus RS485					C		
1x mA + Modbus RS485					E		
2x mA + Modbus RS485					F		
3x mA + Modbus RS485					G		
4x mA + Modbus RS485					Н		
1x mA + Modbus TCP/IP					1		
2x mA + Modbus TCP/IP					J		
3x mA + Modbus TCP/IP					ĸ		
4x mA + Modbus TCP/IP					L		
Customised / combined					Z		
Specials							
No adaption standard version						0	

No adaption, standard version	0
Customer specific adaptions required, to specify	S



DOC053.52.35190.Feb19